

Assembly instructions StayPlugged for Attractec Jetsuit
Rev 1.0 7-Jun-2025


Attrac<mark>tec</mark>



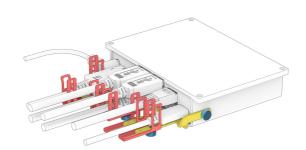



Revision	Date	Description
1.0	7-Jun-2025	Initial release





PN	Description	Units	Page
AT1013	StayPlugged Bracket	1	A1
AT1014	Cable Retention Clip	6	A3
AT1018	Thumb screw for StayPlugged	8	A1, A3




Assembly instructions StayPlugged for Attractec Jetsuit A1 Assemble bracket

Push StayPlugged bracket into designated slots in sides of Jetsuit Tighten two thumb screws

Attractec Attractec

Assembly instructions StayPlugged for Attractec Jetsuit
A2 Insert cable

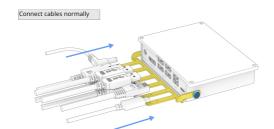




Assembly instructions StayPlugged for Attractec Jetsuit

Attrac<mark>tec</mark>

A3 Assemble clips







Push clip onto bracket post

Partially tighten thumb screw

Push clip forward until it presses against the cable's connector and tighten thumb screw



Repeat for all cables



There are two positions for thumb screw. The outermost is for long connectors.

